

ITSU
御手の物[®]



Rev.1.0

User Manual
IS0602 使用説明書

ITSU
御手の物®

User Manual

All information is correct at the time of printing

Thank you for purchasing ITSU product.

Please read the Safety Precautions carefully before using the foot massager. The Safety Precautions are divided into 'warnings' and 'attention' in terms of the degree of danger. This book should be kept available for future reference after reading.

Contents

Safety Instructions	2
Warranty Claim	4
Product Parts	5
Product Operation Guide	7
How to use	10
Product Maintenance	12
Common Problems & Solutions	16
Product Specifications	18
Contact Us	19

Safety Instructions

Before operating the unit, please read all instructions carefully.

Make sure that the product is connected to a dedicated electric outlet for 220-240Vac, 50 Hz/60Hz.

Electricity Safety

- Do not handle the power plug or electric outlet with wet hands.
- Do not use a damaged power cord or plug.
- Plug in the power plug properly to operate the product.
- Do not attempt to disassemble or repair any electronic parts of the product.
- Do not spill water or liquids on the product.
- Do not use the product in a damp or humid environment.

Operation Safety

- Do not use the product near heating areas or on top of a heating surface.
- Do not use the product if you are experiencing health complications or conditions as stated below:
 - Suffering from heart diseases, malignant tumors, back pain, spine disorders, osteoporosis, high blood pressure and knee joint degeneration.
 - Pregnant or menstruating
 - Feeling unwell, fever, having inflammation, bruises and sensory impairment.

Others

- When there is a power outage, carefully unplug the product.
- If the product functions abnormally, immediately turn off the power, disconnect the power plug and contact our service centre.
- If you feel unwell or experience any discomfort while using the product, stop using it immediately.
- Close supervision is necessary when the product is near children, infants, or disabled persons.
- Do not insert your hand or foot into any openings of the product.
- The product is intended for use of one person each time.

Safety Instructions

Warning

- Do not fall asleep while using the product.
- Do not use the unit after drinking alcohol.
- Suggested usage time is 20 minutes, please rest for 30min before use it again.
- if you feel unwell or sick, Please stop immediately.
- Please follow the instructions accordingly while using the unit.
- While the product is in use, do not insert your hands into the space on the two sides of the product.
- Children should be supervised to ensure that they do not play with the product.



Use caution when handling the product, as some parts may contain sharp edges or protrusions that could cause injury if not observed.



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

 


Caution: read this user manual carefully before use.



Warranty Claim

1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from ITSU or any authorized distributors.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repairs are not covered by this warranty.
6. Warranty does not cover accessories and add-ons, which do not belong to the product.
7. Warranty is not effective to rental, business, commercial, institutional, or other non-residential users.
8. All services covered by this warranty must be approved by ITSU and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, ITSU reserves the right to make substitutions in lieu of repair or replacement.

Product Parts



Product Parts

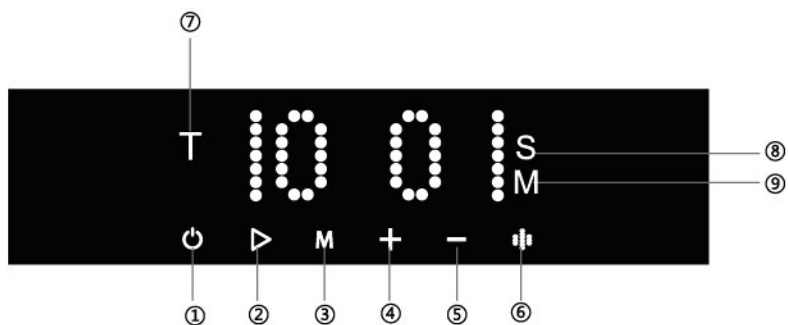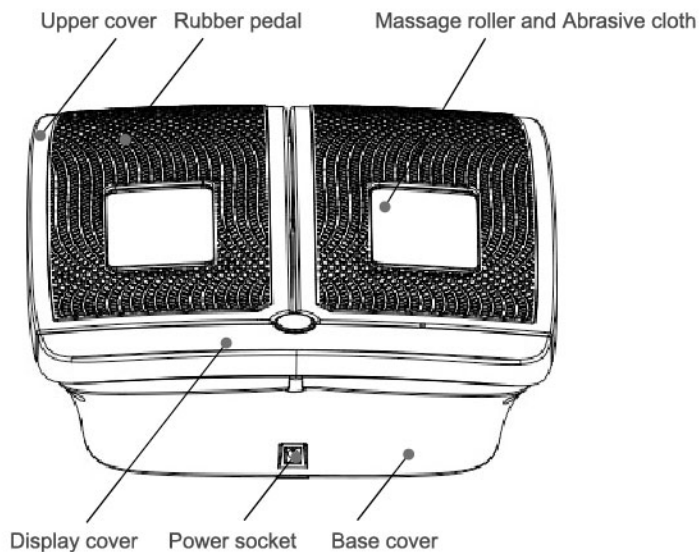  


- | | | |
|------------------|----------------|---|
| ① Power Button | ② Start/stop | ③ Movement (with roller or without roller) |
| ④ Increase speed | ⑤ Reduce speed | ⑥ Auto mode |
| ⑦ Time | ⑧ Speed | ⑨ Display M |

Product Operation Guide

Please check before use

 The product is for 220-240Vac, 50 Hz/60Hz.

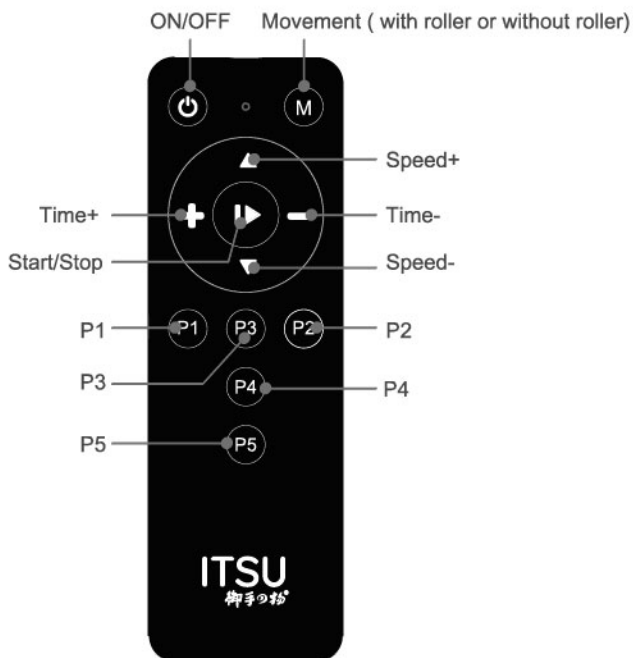

1. Power :keep power supply energized.
2. start/stop : control start and stop of the machine running state.
3. Movement : control the two major movement of the machine, press the button to choose with roller or without roller (just up and down).
4. Speed increase: Manual 1-20. Press this button. To increase the speed when the machine is operating.
5. Speed decrease: Manual 1-20. Press this button.To decrease the speed when the machine is operating.
6. Time increase:Maximum 20minutes, press this button to increase time. (the device's default setting is 10 minutes).When the machine is operating.
7. Time decrease: Maximum 20minutes, press this button to decrease time.(the device's default setting is 10 minutes).When the machine is operating.
8. P1,P2,P3,P4,P5 : Auto program Select Auto program by default and press the start/stop button to start.

Product Operation Guide

 
Speed range 1-20 levels

A=movement without Roller


B=movement with roller

preset program 10 mins each, after press started the time will countdown.

P1

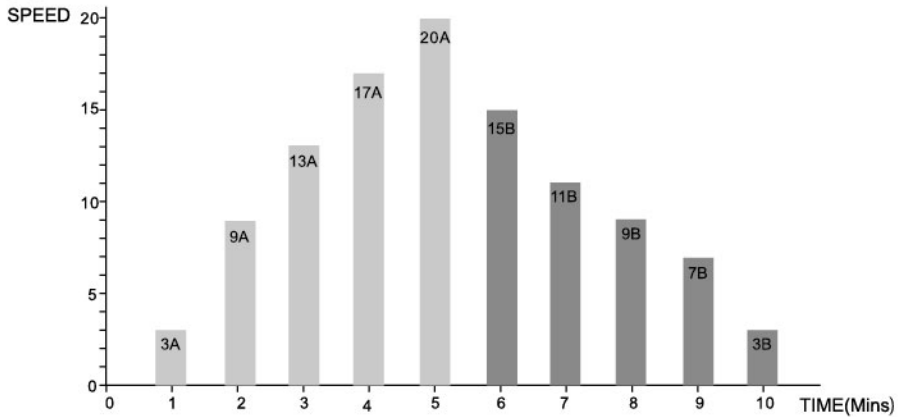


P2

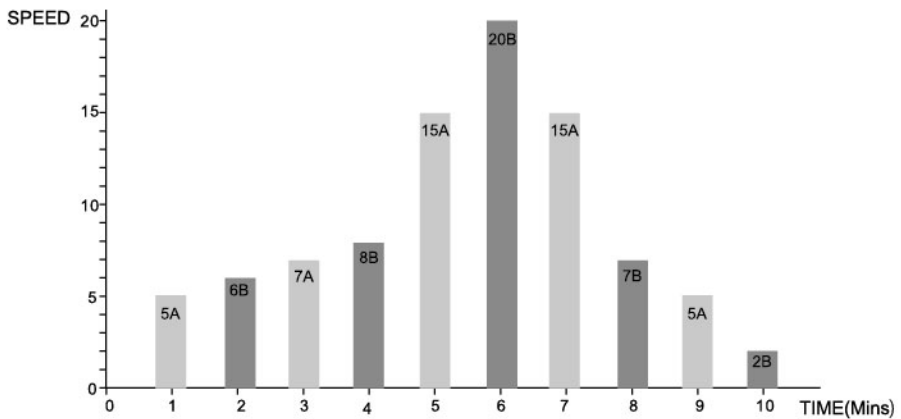 


Product Operation Guide

 
P3

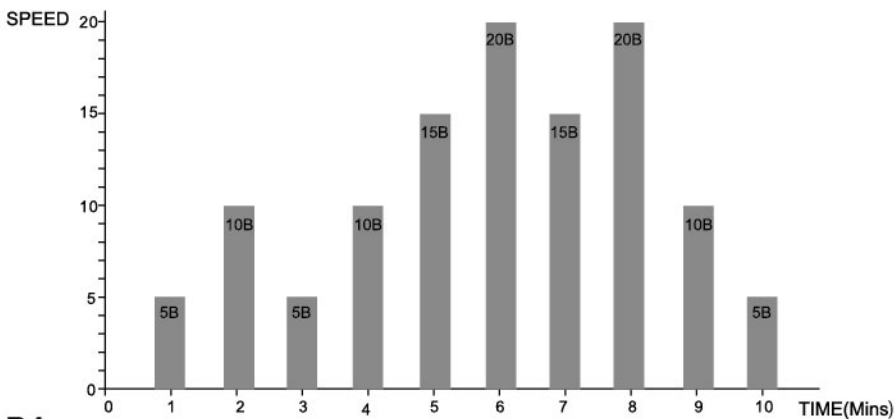

P4

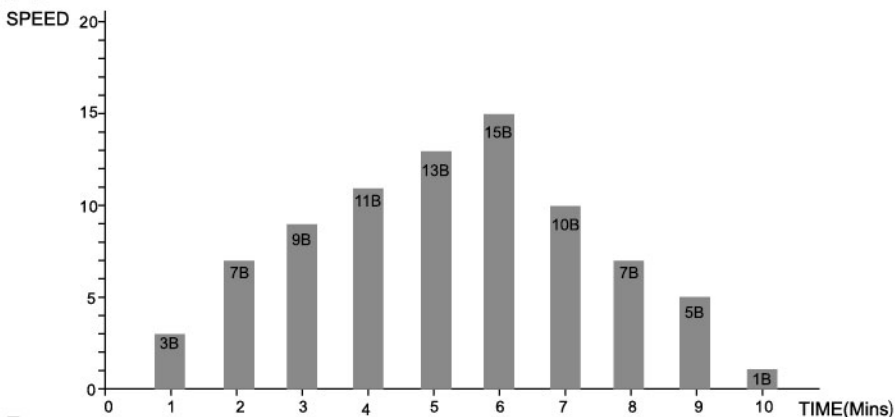 

P5

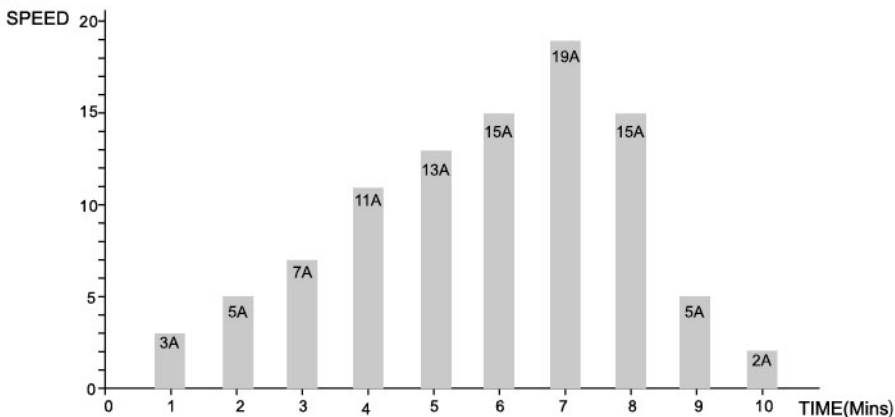 

How to use

place your feet and finally, set your speed. There you go, now you can get all the benefits of this passive gym wherever you go.

·Its movements are precise, continuous and with vibrations, this will keep your legs moving continuously, improving your blood circulation, helping you prevent leg cramps and back pain while also decreasing vascular problems and leg inflammation.

·Improve your health: Creates constant leg movement to mimic the natural muscle activity of walking in the convenience of your own home or office.

·Improve your figure: Our leg exercise machine also helps you improve your figure by fighting with cellulitis and helping you to prevent those awful varicose veins. It also strengthens your muscles everytime you use it. Just sit back, relax and with just 20 minutes a day you will see results.

1. Foot vibration massage

Under the office desk



Sit on the couch



Lateral varus of foot



Tiptoe cock



Use on tiptoe

 


How to use

2. LEG vibration massage




Calf/belly use

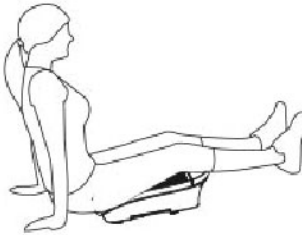

Use of inner thigh



 
Back and Waist massage

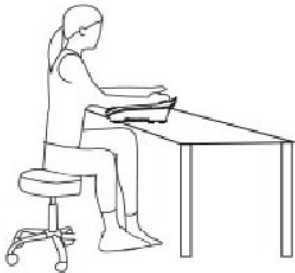

Arm vibration massage



 Hand vibration massage

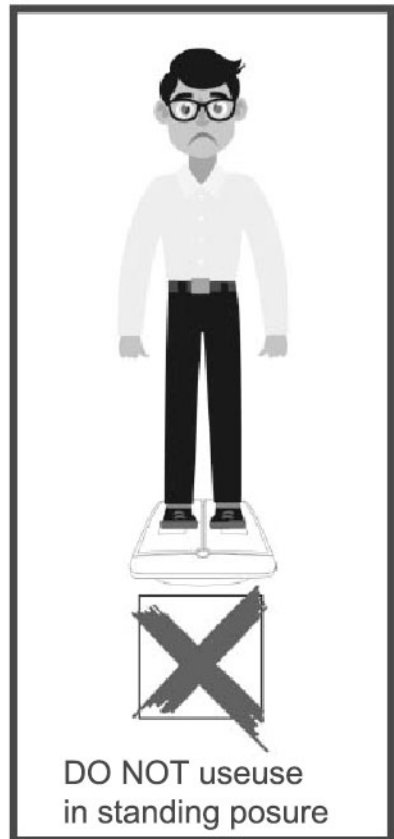

Product Maintenance

- If the product was stored in a cold place for a period of time, it is suggested to wait one hour before usage.
- If the product is going to be placed in a special environment, such as salty or sulfurous area, please contact our service center for protection to prevent malfunction.
- Always unplug the unit before cleaning it.
- Please do not use thinner, benzene or alcohol to clean the unit.
- Use dry cloth to thoroughly clean the product, do not wipe with wet cloth.
- Do not place the product near heaters, or exposed to heat resources or direct sunlight.
- If you may not use the product for a period of time, it is suggested to unplug the unit and store it well under a clean and dry environment.
- Do not eat or drink on the product, to prevent malfunction.
- Storage environment :Temperature-10°C~55°C, Humidity RH0~85%

AUTO	1	2	3	4	5	6	7	8	9	10
P1	3A	9A	13A	17A	20A	15B	11B	9B	7B	3B
P2	5A	6B	7A	8B	15A	20B	15A	7B	5A	2B
P3	5B	10B	5B	10B	15B	20B	15B	20B	10B	5B
P4	3B	7B	9B	11B	13B	15B	10B	7B	5B	1B
P5	3A	5A	7A	11A	13A	15A	19A	15A	5A	2A

Speed range 1-20 levels

A=movement without Roller

B=movement with roller

preset program 10 mins each, after press started the time will countdown.

Product Maintenance

※When cleaning, be sure to turn off the power and unplug the power cord from the socket.



Wipe dirt with a dry, soft cloth.

※ if the dirt is serious, please put the diluted neutral detergent in the rough cloth, wring it out and then wipe it. After that, please wipe it with a dry cloth.





Be sure to clean the remote with a dry cloth, as cleaning the remote with a wet cloth may cause malfunction.



Do not clean the equipment with water. Do not use diluent, benzene, alcohol, remover and other organic solvents to clean the host. Otherwise it may fade, corrode and crack.










Product Maintenance

Please store this product in the following places

		Temperature 10 ~35 °C Humidity: 20 ~80%
Horizontal and stable place	Ventilated area	Above temperature and humidity location

Please do not store this product in the following places

The device is made of sophisticated mechanical and electronic components. Avoid installing the machine in the following places, which may cause a failure.

		
Places exposed to direct sunlight	Places with a lot of dust	Places where temperature changes rapidly
		
Places where the humidity changes drastically	Places with fire	Places that are easily wet by water
		
Places with volatile substances	Places close to cooling and heating equipment	Places with vibration



Caution

Do not use it on infants or people who cannot express their intentions, and do not keep it within easy reach. Otherwise it could lead to an accident or poor health.

Product Maintenance

- If the product was stored in a cold place for a period of time, it is suggested to wait one hour before usage.
- If the product is going to be placed in a special environment, such as salty or sulfurous area, please contact our service center for protection to prevent malfunction.

Always unplug the unit before cleaning it.

Please do not use thinner, benzene or alcohol to clean the unit.

Use dry cloth to thoroughly clean the product, do not wipe with wet cloth.

Do not place the product near heaters, or exposed to heat resources or direct sunlight.

- If you may not use the product for a period of time, it is suggested to unplug the unit and store it well under a clean and dry environment.
- Do not eat or drink on the product, to prevent malfunction.
- Storage environment :Temperature-10°C~55°C, Humidity RH0~85%

Common Problems & Solutions:


Q1	Does not work when power is turned on	Q5	Can it be used in the bathroom?
A	Check that the power cord is connected to both the host and socket. Check whether the main power switch is on. Check the operation panel or remote control is not working. * if only the remote control does not work, please replace the battery, because the remote control battery may be dead.	A	This product is not waterproof. Please do not use it in the bathroom as it may cause trouble.
		Q6	Can it be used outdoors?
		A	Don't use it. Please do not use it outdoors as it may cause trouble.
Q2	Suddenly stopped	Q7	Can I use it during pregnancy or right after giving birth?
A	Check that the power cord is connected to both the host and socket.	A	Please do not use. For postpartum and lactating persons, consult a physician who frequently visits the clinic.
Q3	Make noise	Q8	Is there a weight limit?
A	Be sure to install it in a flat and stable place. The structure of the product produces some operational noise, so it is not an anomaly in this case. If the noise is heard inside the product, foreign body may be mixed in due to damage or other reasons. Please contact the customer service window on page 00.	A	The load capacity of the product is 100kg. Do not use if the load capacity is exceeded.
			Remote control does not respond
		A	Please replace the battery of the remote control. Other reasons may be the remote location of the product and remote control, not suitable for display panel. Please aim the remote control at the display panel and operate within a distance of 1.5m.
Q4	Can I use it every day?	Q10	I lost my remote
A	No problem but only use it three times a day (30 minutes) at most. Overuse can lead to accidents, such as injuries.	A	Consult your dealer.
Q11	I don't know where to attach the band	Q16	Stuck, unable to operate
A	On the back of the main frame there is a connecting plate for the upper body band. Please refer to page 24 for details.	A	Replace the battery of the remote control and check the operation of this product again. In addition, the product is designed to stop automatically 10 minutes after use, either automatically or manually.
Q12	I want to attach the ground terminal, but there is no mounting hole at home	Q17	Strong current, feel pain
A	After consulting with a dealer or electrical construction shop, we recommend ground installation work (class D < type 3 > installation work).	A	The output setting may be too high. Try adjusting the output using the remote control. In addition, EMS mode is used only once a day.
Q13	Weak stimulation in EMS mode		
A	Output Settings may be low. Adjust the output with the remote control.		
Q14	I feel the stimulus is different on the left and right		
A	If only one foot is wet, or if you use a moisturizer, the current experience will be different. Please do not use this product until you have thoroughly wiped your feet. Also, even if only one leg has a scratch or cut, the body will feel different. Do not use this product until the wound is completely healed.		
Q15	Warning sound does not stop * Manual (EMS mode)		
A	Due to dry skin, the current may not flow easily. Please use again when the contact surface is wet		

Common Problems & Solutions:

S/N	Problems	Causes	Solutions
1	The Product can not be started	The plug is not in place	Insert the plug
		The power switch is off	Turn switch on, the indicator
2	Sound like phew or Da-da is heard during working	Normal sound generated by the Motor or from the abrasion Between mechanical units	No additional treatment is required
3	Operate the controller, but the Product no action	The electricity of batteries is worn out	Replace batteries
		The controller is too far away from the Product	The effective distance of infrared signal is 2.5M
4	Sudden stop	Default working time is up	Restart it after 10 minutes'interval
5	Can not operation	Too many commands sent to the Product and they can not be responded in time	Power off and then restart
6	Display "ER01" or "ER02"	The motor's working current is over	Disconnect the power supply, then Insert the plug and restart or contact with the after-seller

Product Specifications

Voltage	220 – 240Vac, 50/60Hz
Rated power	50W
Model	IS0602
Size	W380mm × D320mm × H135mm
Weight	Approx 4.5kg
Remote control power supply	2 pcs AAA batteries
Material	Body: ABS resin, rubber Remote control: ABS resin Special mat: TPE

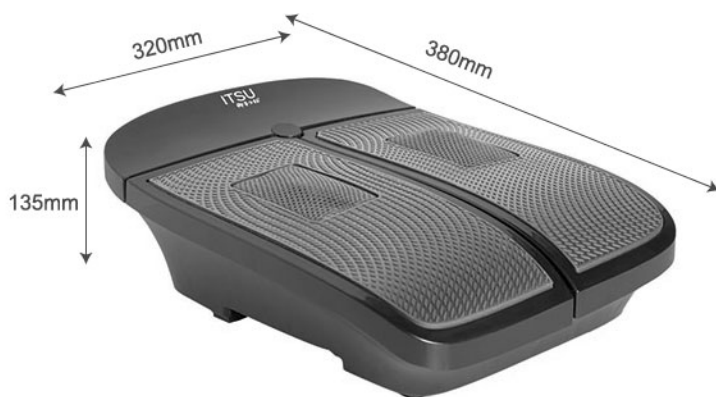 

Contact Us



ITSU WORLD SDN. BHD. (reg. no. 1137036-K)

Unit BO03-B-13A-1,
Menara 3A, KL Eco City,
No.3, Jalan Bangsar,
59200 Kuala Lumpur.

Tel: 1700-81-4878



ITSU World(HK) Limited

Workshop D1,28/F. TML Tower
No. 3 Hoi Shing Road, Tsuen Wan, N.T.

Tel: +852 3611 2228



PT Healthy World

Lodan Center Block O No 20
Jalan Lodan Raya No 2
Jakarta Utara 14430

Tel: +62 21-6983 1123

目錄

安全指引	22
保修權限	25
產品配件	26
操作指南	28
運動指南	31
產品保養	33
常見問題	36
產品規格	38
聯絡我們	39

感謝您購買ITSU的產品。

使用足底按摩器前請仔細閱讀安全注意事項。安全措施根據危險程度分為“警告”和“注意”。這本書應保存起來，以備以後閱讀時參考。

安全指引

請在使用產品之前詳細閱讀此使用說明

本產品僅使用 220-240Vac, 50Hz/60Hz 的電源。

電器安全

- 雙手或雙腳沾溼時，切勿觸碰插座上之插頭
- 如遇本產品電源線脫落或表面破損、龜裂，切勿使用。
- 請將插頭完整插入插座後方使用。
- 不可試圖自行拆卸或修理本產品，本產品僅能由維修人員保養修理。
- 請勿將本產品浸泡。
- 請勿在濕氣過重之處使用本產品。

操作安全

以下人士，請在使用前先諮詢醫生的意見：

- 心臟病患者、惡性腫瘤患者、背痛、脊椎側彎或異常、高血壓、骨質疏松症等。
- 孕婦或月經期間
- 身體不適者、發燒、身體有紅腫或發炎、瘀青、過敏等。

其他事項

- 使用本產品時若逢停電，請立即拔除插頭。
- 當本產品操作異常時，請迅速關閉電源開關拔除插頭，並通知維修人員進行檢查，修繕。
- 在您使用本產品期間若感到任何不適，請立即停止操作。
- 孩童或行動不便者位處本產品周圍時，務必由成人在旁監督。
- 勿將手、腳插入按摩機構間隙。
- 本產品每次僅限一人使用。

安全指引

注意事項

- 逢電源插上及本產品作動時，勿將其留置無人看管。
- 請由插頭處插入或拔除插頭，不可隨意拉扯電源線。
- 切勿將異物插入機構間隙內。
- 坐本機時必須坐立中間點，避免單邊重力施壓。
- 請在平坦之地面使用本產品。
- 本產品僅限於室內使用。
- 體重超過100公斤有機會加速機件耗損。

警告

- 請勿在打盹時使用本產品
- 酒醉者請勿使用本產品
- 每次使用10分鐘為準，視乎個人體質而決定時間
- 請務必依循本手冊所述使用本產品
- 使用時勿將手、腳插入按摩機構間隙
- 應監管兒童以確保他們不會玩耍本產品

安全指引



使用時要小心處理產品，部分零件可能含有鋒利的邊緣或突出物，若疏忽可能會導致受傷。



處理此器材的正確方法

本標誌表示此產品皆不可與家庭廢棄物一同丟棄。為避免任意丟棄對環境與人體健康可能造成的傷害，應增加回收後可利用物質的再使用性。

歸還使用過器具，請遵循歸還及回收程序，或與原購買零售商聯繫。

他們能將產品進行對環境安全的回收。



警告：使用前仔細閱讀此說明書。

保修權限

1. 本保修權限不得轉讓於其他人或產品
2. 本保修服務僅有效餘ITSU或其授權代理購買產品
3. 當要求保修服務時，請出示正本購買收據。
4. 保修範圍內的維修服務自購買日起有效，期限需視各國的保修政策而定。
5. 由於錯誤的使用，不適當保養以及未經授權私自改裝和維修產品而導致的損壞，不屬於保修範圍。
6. 此保修範圍不包括不屬於產品本身的附件。
7. 此保修範圍不適用於租憑交易，商業機構或其他非居民使用者。
8. 此保修範圍內所涉及的維修服務需經過ITSU授權，且必須由授權的技術人員維修。
9. 若需更換的維修附件缺貨，ITSU有權採用替代配件進行維修。

 
產品配件



腳底按摩器



遙控器





電池X2



電源適配器

  產品配件

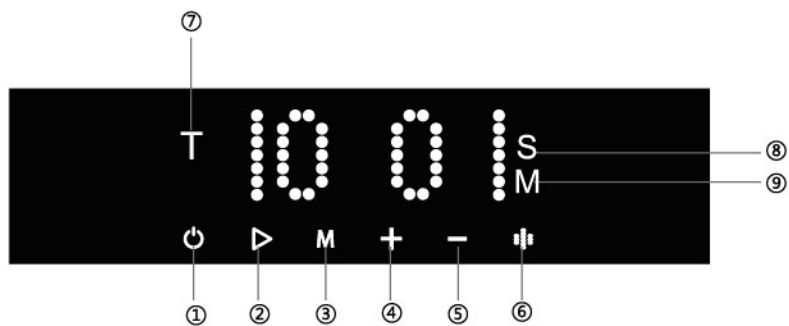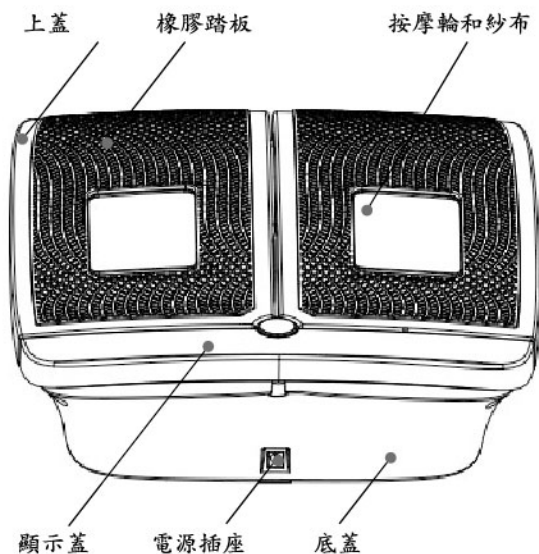


- ① 電源按鈕
- ② 啓動/停止
- ③ 運動（帶滾輪或不帶滾輪）
- ④ 速度+
- ⑤ 速度-
- ⑥ 自動模式
- ⑦ 時間
- ⑧ 速度
- ⑨ 顯示 M

操作指南

使用前請檢查

 該產品適用於220-240Vac, 50Hz/60Hz.

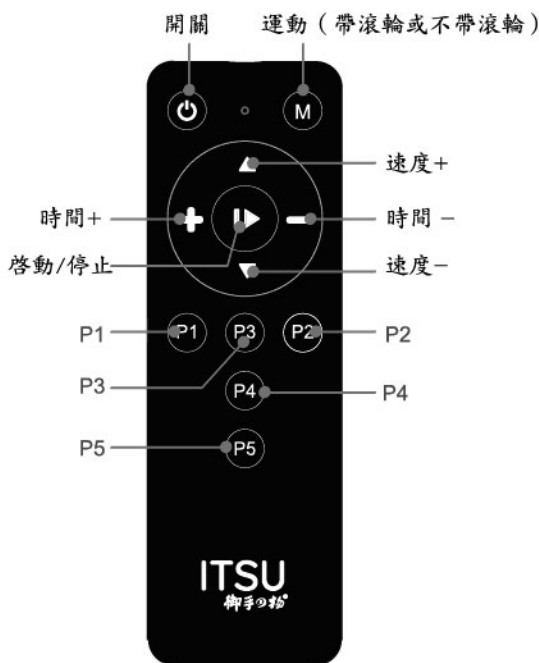

1. 電源: 保持電源通電。
2. 開始/停止: 控制機器運行狀態的啓動和停止
3. 運動: 控制機器的兩個主要運動, 按下按鈕進行選擇。有無輓子(祇是上下)。
4. 速度增加: 手動1-20。按下這個按鈕。機器運轉時加快速度。
5. 減速: 手動1-20。按下這個按鈕。機器運轉時降低速度。
6. 時間增加: 最長20分鐘, 按此鍵可增加時間。(設備默認設置為10分鐘)。當機器運轉時。
7. 時間減少: 最長20分鐘, 按此鍵可減少時間。(設備默認設置為10分鐘)。當機器運轉時。
8. P1、P2、P3、P4、P5: 自動程序默認選擇自動程序, 按啓動/停止鍵啓動。

操作指南

速度範圍1-20級

 
A=運動不帶輪

B=運動帶輪

預設程序各10分鐘，按下啓動後時間將倒計時。


P1

速度

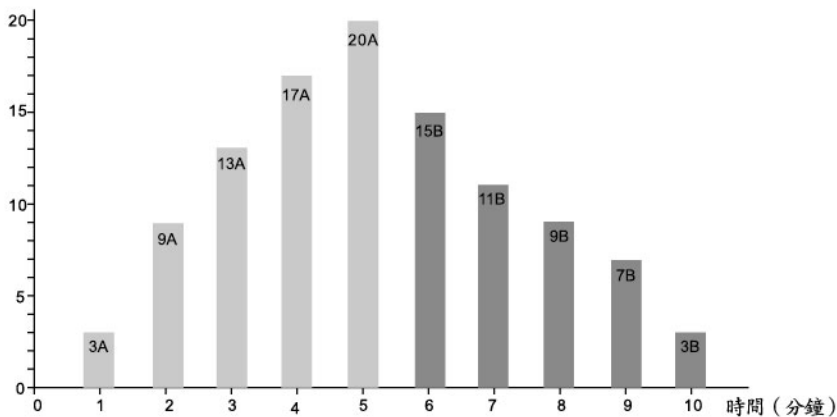


P2

 速度

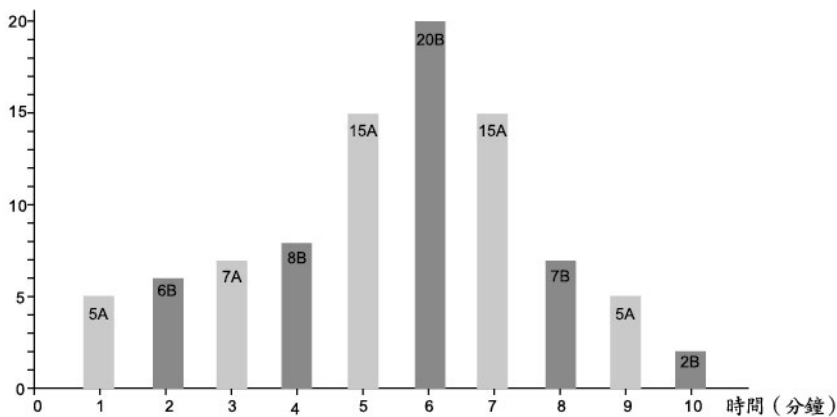


操作指南

 
P3

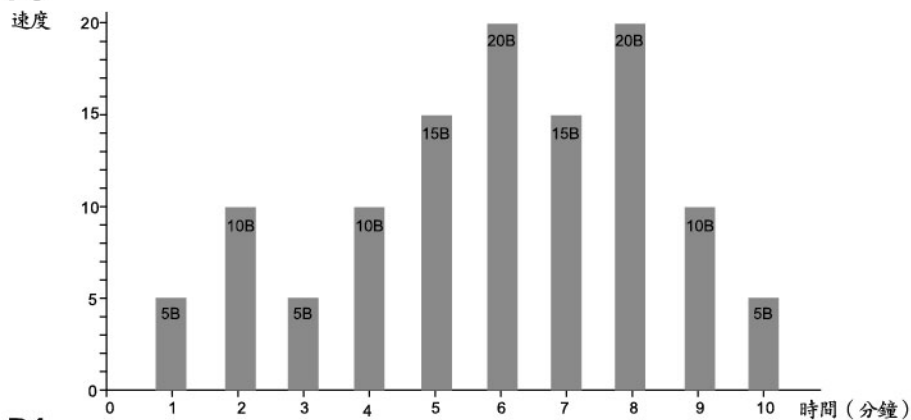

P4

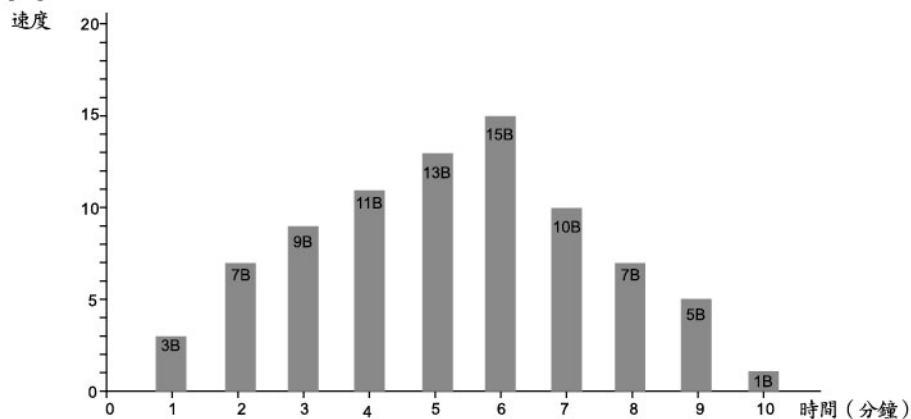 

P5

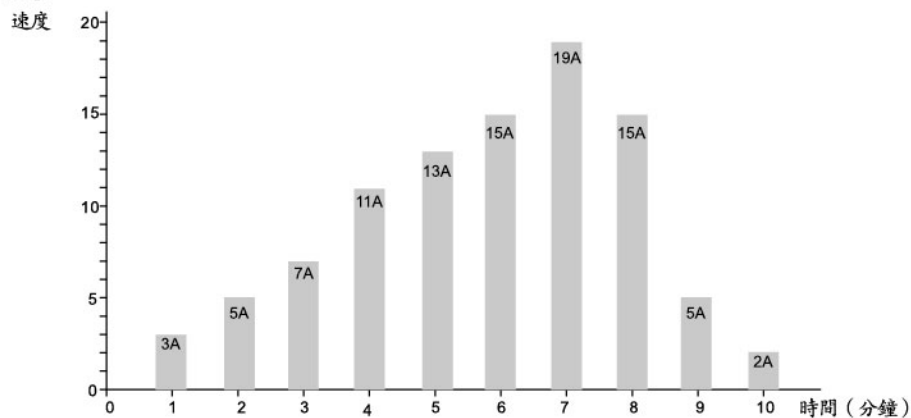 

運動指南

雙腳着地，最後設定速度。好了，現在無論你去哪裏，你都可以得到這個被動健身房的所有好處。它的運動是精確的，連續的，并伴隨着振動，這將保持你的腿的運動。持續改善血液循環，防止腿部抽筋和背部疼痛，同時減少血管問題和腿部炎癥。

改善你的健康:創造持續的腿部運動，模仿走路時的自然肌肉活動，方便你自己的家或辦公室。

改善你的身材:我們的腿部運動機還可以通過與蜂窩織炎鬥爭來幫助你改善你的身材，并幫助你預防可怕的靜脈曲張。當你每次使用它的時候，它也能增強你的肌肉。祇要坐下來，放鬆，每天祇要20分鐘，你就會看到結果。

1. 振動按摩腳

在辦公桌下



坐在沙發上



足外側內翻



腳尖旋塞



使用踮起腳尖

 


運動指南

2. 振動按摩腿



Wave
小腿肚使用

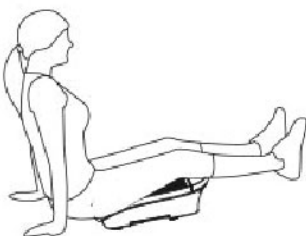

大腿內側使用



 
腰背按摩



手臂振動按摩



手部振動按摩

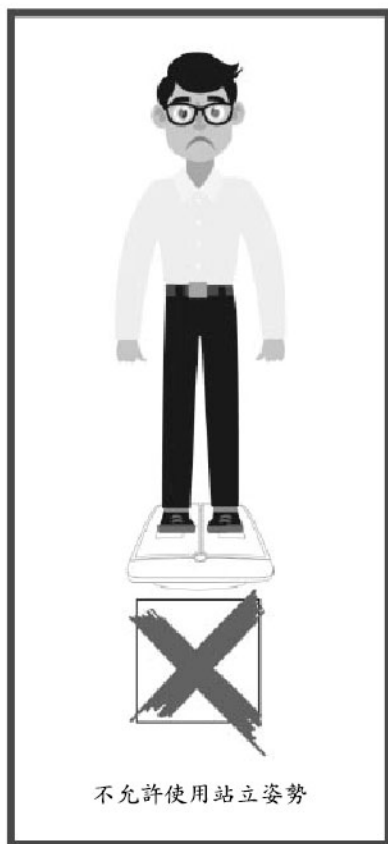

不允許使用站立姿勢

產品保養

- 如果您的產品因運送、搬移或其他原因而曾置在低溫的環境下過久，請待置於室溫一小時方開機使用。
- 若欲將本產品置於特殊環境如：易受鹽分、硫磺等物質侵蝕的地區，敬請事先告知安裝人員做好防護措施，否則將可能造成機體損壞。
- 清潔保養本產品時，請先自插座取下插頭
- 請勿以苯類、稀釋劑或任何侵蝕性溶劑擦拭本機。
- 請僅使用乾布擦拭本機，切勿用濕布。
- 切勿將本產品長期暴露於陽光直射處，亦不可擺放接近於火源、高溫處。
- 若您將有一段時日部會使用到本產品，建議將電源線拔除後整齊捲好，並儲放本產品於較無塵且乾燥空間。
- 切勿在產品上飲食、以防不慎傷害到本產品。
- 儲存環境為：攝氏-10 C ~ 55 C，濕度為RH 0~85%

AUTO	1	2	3	4	5	6	7	8	9	10
P1	3A	9A	13A	17A	20A	15B	11B	9B	7B	3B
P2	5A	6B	7A	8B	15A	20B	15A	7B	5A	2B
P3	5B	10B	5B	10B	15B	20B	15B	20B	10B	5B
P4	3B	7B	9B	11B	13B	15B	10B	7B	5B	1B
P5	3A	5A	7A	11A	13A	15A	19A	15A	5A	2A

速度範圍1-20級

A=不帶輪運動

B=帶輪運動

預設程序各10分鐘，按下啓動後時間將倒計時。

 
產品保養

※清洗時，一定要關掉電源，從插座上拔下電源線。





用乾燥的軟布擦拭污垢。

※如污垢嚴重，請將稀釋後的中性洗滌劑放在粗糙的抹布上，擰幹後再擦拭

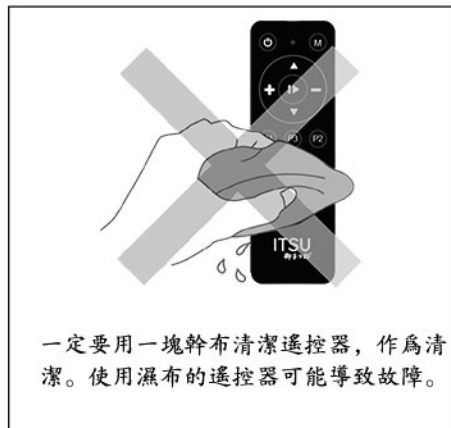



產品保養

 請將本產品存放在以下地方。

		溫度10 ~35℃ 濕度:20 ~80%
水平穩定處	通風地方	溫度和濕度在以上範圍的地方

請不要將本產品存放在以下地方

這個裝置是由精密的機械和電子元件組成的。避免將機器安裝在以下位置，以免造成故障。

 <p>暴露在陽光直射下的地方</p>	 <p>有很多灰塵的地方</p>	 <p>溫度變化迅速的地方</p>
 <p>濕度變化劇烈的地方</p>	 <p>用火的地方</p>	 <p>容易被水弄濕的地方</p>
 <p>有揮發性物質的地方</p>	 <p>靠近冷卻、加熱、設備的地方</p>	 <p>振動的地方</p>



不要用在嬰兒或不能表達自己意圖的人身上，也不要把它放在觸手可及的地方。否則，它可能會導致事故或健康狀況惡化。

常見問題及解決方案：


Q1	當電源打開時不工作	Q5	可以在浴室使用嗎?
A	檢查電源線是否連接到主機和插座上。檢查總電源開關是否打開。檢查操作面板或遙控器不工作。*如果祇有遙控器不工作，請更換電池，因為遙控器電池可能已經沒電了。	A	本產品不防水。請不要在浴室使用它，因為它可能會給我帶來麻煩。
		Q6	可以在戶外使用嗎?
		A	不要使用它。請不要在戶外使用，否則會造成麻煩。
Q2	突然停止	Q7	我可以在懷孕期間或產後使用它嗎?
A	檢查電源線是否連接到主機和插座上。	A	請不要使用。對於產後和哺乳期的人，請向經常到診所就診的醫生諮詢。
Q3	有異音	Q8	有重量限制嗎?
A	請務必將其安裝在平坦、穩定的地方。產品的結構會產生一些操作噪音，所以在這種情況下它不是異常。如果在產品內部聽到噪音，可能由於損壞或其他原因有異物混入。請聯系第00頁的客戶服務窗口。	A	產品的承載能力為100kg。如果超過了負載能力，請不要使用。
		Q9	遙控器沒有反應
		A	請更換遙控器的電池。其他原因可能是產品位置和遙控器遠，不適合顯示面板。請將遙控器對準顯示屏，在1.5米範圍內操作。
Q4	我可以每天都用嗎?	Q10	遙控器弄丟了
A	沒問題，但一天最多祇用三次(30分鐘)。過度使用會導致意外，例如受傷。	A	諮詢你的經銷商。
Q11	不知道該把拉繩系在哪裏	Q16	卡住了，無法操作
A	在主架的背面有用于上體帶的連接板。詳情請參閱第31頁。	A	更換遙控器電池，并再次檢查本產品的使用情況。此外，本產品設計在使用後10分鐘自動停止，自動或手動。
Q12	想接上接地端子，但家裏沒有安裝孔	Q17	強電流，感覺疼痛
A	經諮詢經銷商或電氣施工車間，建議進行地面安裝工程(D類<3型>安裝工程)。	A	輸出設置可能過高。試着用遙控器調節輸出。另外，EMS模式每天祇使用一次。
Q13	EMS模式弱刺激		
A	輸出設置可能偏低。用遙控器調節輸出。		
Q14	覺得左右兩邊的刺激不同		
A	如果祇有一祇腳是濕的，或者你用了保濕霜，現在的體驗就會不同。請不要使用本產品，直到您徹底擦拭您的腳。而且，即使祇有一條腿有劃痕或劃傷，身體也會有不同的感覺。在傷口完全愈合之前不要使用本產品。		
Q15	警告聲不停 手冊(EMS模式)		
A	由於皮膚幹燥，電流可能不容易流動。接觸面濕後請再次使用		

常見問題及解決方案：

S/N	現象	可能原因	處理方法
1	無法開機	電源插頭沒有插好	插好電源插頭
		產品電源開關未打開	打開電源開關指示燈亮
2	機器工作中發出"咻咻"或"噠噠"的聲音	這是機器運轉時發出的聲音，而非機械故障，屬正常工作聲音	無需處理
3	手控器操作，機器無反應	手控器電池沒電	更換電池
		手控器遙控距離太遠	遙控器有效感應範圍
4	使用過程中停止	默認工作時間到	間隔10分鐘後再次開機使用
5	無法正常操作	可能執行命令過於頻繁	關閉電源，重新啓動
6	顯示“ER01”或“ER02”	電機電流過載	斷開電源并重啓或聯系售後服務

產品規格

額定電壓	220 - 240Vac, 50/60Hz
額定功率	50W
型號	IS0602
尺寸	W380mm × D320mm × H135mm
重量	約 4.5kg
遠程控制電源	2 pcs AAA batteries
成分主體	ABS樹脂、橡膠、遙控:ABS樹脂, 特殊的墊子:TPE

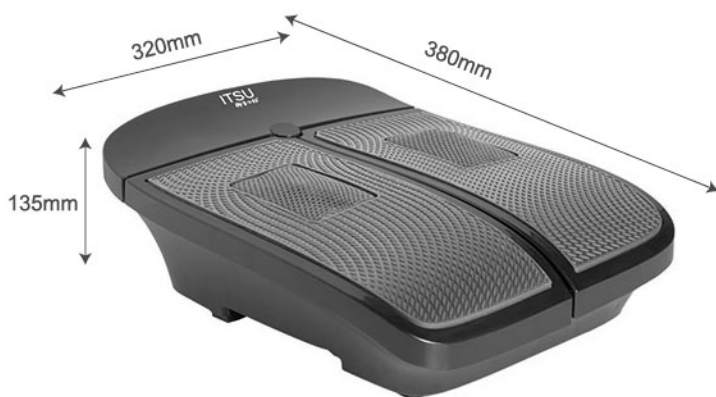 

聯絡我們

馬來西亞



ITSU WORLD SDN. BHD. (reg. no. 1137036-K)

Unit BO03-B-13A-1,
Menara 3A, KL Eco City,
No.3, Jalan Bangsar,
59200 Kuala Lumpur.

Tel: 1700-81-4878



ITSU World(HK) Limited

Workshop D1,28/F. TML Tower
No. 3 Hoi Shing Road, Tsuen Wan, N.T.

Tel: +852 3611 2228



PT Healthy World

Lodan Center Block O No 20
Jalan Lodan Raya No 2
Jakarta Utara 14430

Tel: +62 21-6983 1123

